


## SERVICE INSTRUCTIONS: FUEL FILTER REPLACEMENT ELEMENT

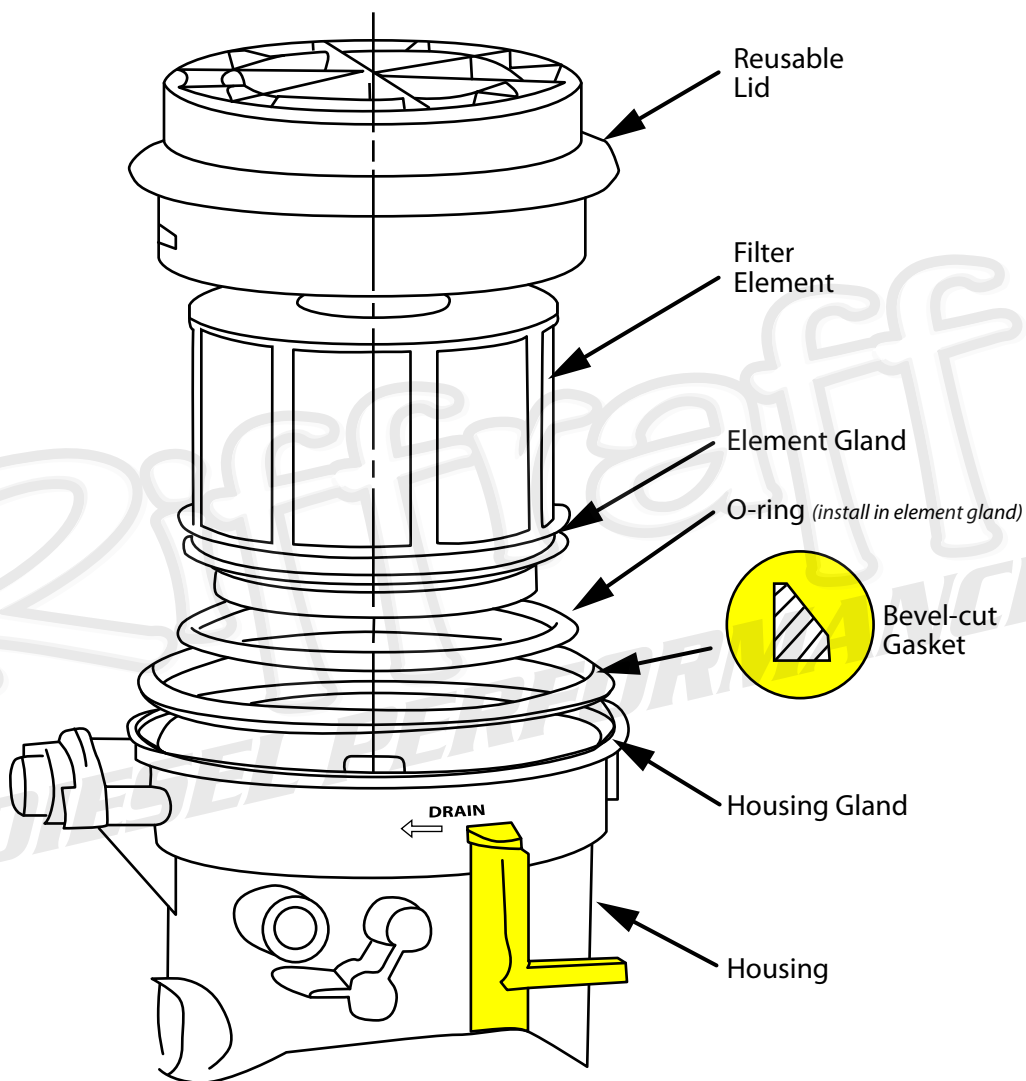

1. Using a filter strap-wrench, remove the fuel filter lid.
2. Remove and discard the bevel gasket. Carefully clean the mating surfaces.
3. Remove the old filter element (and O-ring).
4. Apply a coating of diesel fuel to the new bevel gasket and O-ring.
5. Install the bevel gasket into the housing gland and install the O-ring into the element gland.
6. Install the lid into the housing slowly, allowing the fuel to soak into the element. Tighten until the lid contacts the housing.