

Determining Intercooler Boot Size



Page 1 of 1

Determining the intercooler flange size is required before ordering your Riffraff Diesel Intercooler Boots. The intercoolers have different configurations, so you must verify the size prior to ordering. This is an easy task and only takes a few minutes.

There are two sizes of flanges 3"x3" and 3"x3.25". You must measure both sides to make sure you get the correct boots.

You can measure your boots in several ways.


- Using a outside diameter caliper (shown to the right).
- Wrapping a string around the boot and comparing the length difference.
- Or you can make a simple go/no-go gauge to slide over the boot flange.



Here is a side by side comparison of the two replacement boots, you can see the difference. The 3"x3.25" version is on the right



Passenger side intercooler boot (cold side). This is located under the degas bottle. (degas bottle removed)

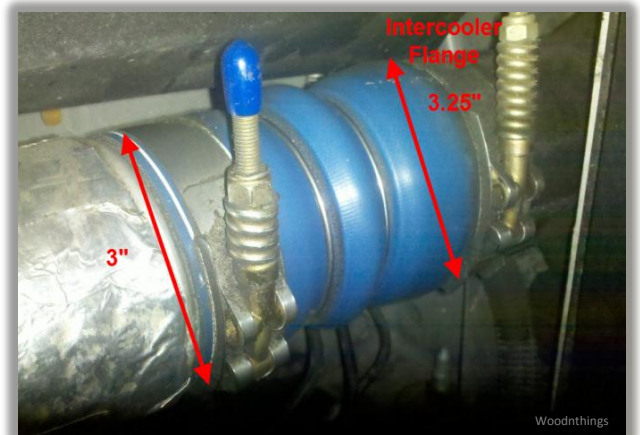

Drivers side intercooler boot (hot side). This is located under the air intake snorkel.

Toll Free Sales & Customer Service: (866) 446-3360